

OPERATING INSTRUCTIONS TOASTER

TOAST

Connect the device to the mains.

Put the roasting material in the slots.

Select the desired degree of browning (1 light - 6 very dark).

Press the lift button down until it clicks into place.

STOP FUNCTION

Press the stop button.

The roasting process is interrupted.

EXTRA - LIFT

The lifting device makes it easier for you to remove the roasted material.

Lift the lift button and remove the roasting material.

BUN TOWER

The bread roll attachment also serves as a warming function for your freshly toasted bread.

Simply place the roasting material on the bread roll attachment.

CRISPING BUNS

Place the rolls on the bread roll attachment.

Set the browning level control between levels 2 and 3.

Press the lift button down until it clicks into place.

When the lift button is up again, turn the bun once and press the lift button again.

Attention! The bread roll attachment will be hot when toasting, do not touch.

EMPTY THE CRUMB TRAY

Fallen crumbs accumulate in the crumb tray. Press the "push" button. Remove the crumb tray and remove the crumbs. Put the crumb tray back in place.

SAFETY INSTRUCTIONS

LOCATING

The device must be set up on a horizontal, non-slip and heat-resistant surface with adequate load-bearing capacity.

Only use the device in an upright position: Never operate the device when it is lying on its side.

Choose the place of installation so that children cannot touch the hot surfaces of the device or the cable.

Do not place the unit in a hot, wet or damp environment.

The socket must be easily accessible, so that the power cord can be easily removed if necessary.

FIRE HAZARD

The device has a strong heat radiation upwards. Never place the device near or under flammable materials, such as Curtains.

Attention! Bread can burn.

If the material is jammed, unplug the unit, allow the unit to cool down and carefully remove the material to be roasted.

The bread slits must not be covered.

ATTENTION

Never reach into the bread slots with your fingers.

Do not insert objects made of metal, plastic or similar materials into the bread slots.

Make sure that the lift button is always free to move, otherwise the toaster can not switch off automatically, as the lift button is held electromagnetically.

Never operate the appliance without a crumb tray and empty it regularly.