

INSTRUCTION MANUAL WATER BOILER

BOILING WATER

Take the base station and unwind the cable as far as possible.

Open the lid and fill the device with water.

Note: Make sure that you do not exceed the inside maximum filling mark.

Fill the device so that the water level is between the minimum and maximum screed.

Close the lid and place the unit back on the base station.

Plug the plug into the socket.

Turn on the device.

As soon as the cooking process is finished, the appliance switches off automatically.

Control lamp goes out. If desired, you can boil the water again by pressing the on / off switch again. Wait about 30 seconds after the device has switched off automatically.

LIFT-OFF SHUTDOWN

If you accidentally remove the device from the base station during the cooking process, the device will switch off. This is the so-called lift-off shutdown.

DRY AND OVERHEAT PROTECTION

This unit is equipped with a dry and overheat protection. Should it ever happen that you have operated the device without water or only too little water, the device switches off. Wait a moment for the device to cool down. Fill the device with water and continue as usual.

LIME FILTER

The removable lime filter prevents limescale from being poured out.

SAFETY INSTRUCTIONS

LOCATING

The device must be set up on a horizontal and non-slip surface with sufficient load-bearing capacity.

Make sure that the device cannot fall over.

Choose the place of installation so that children cannot touch the hot surfaces of the device or the cable.

Never use the device near a heat source, in the bathroom or outdoors.

RISK OF INJURY

Do not fill the kettle above the maximum mark with water. Possible overflowing with water can cause injury.

The lid of the device must always be tightly closed.

Do not open the lid during the cooking process.

Only grasp the device by its handle.

Never immerse the device or the base station in water or other liquids.

The plug must be removed from the socket when adding water, after each use and before each cleaning.

ATTENTION

Make sure that there is always enough water in the device to avoid dry cooking.

Do not switch on the appliance until you have filled in water.

Use only cold water.