


# DISHWASHER MANUAL

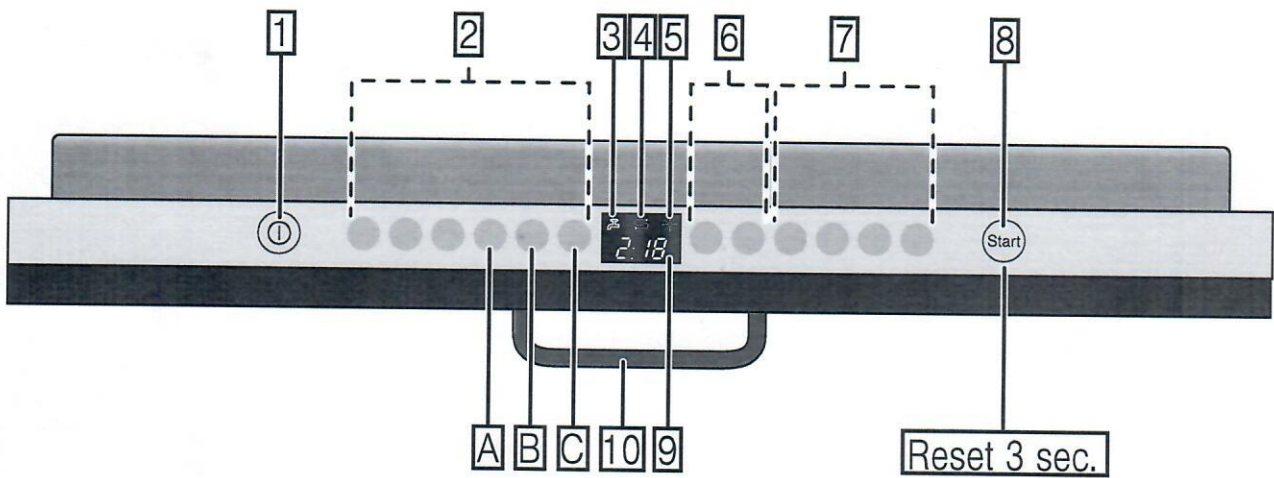

## CONTROL PANEL

- 1 ON-/ OFF-Switch
- 2 Program button
- 3 Display "Check water supply"
- 4 Salt refill indicator
- 5 Rinse aid refill indicator
- 6 Time delay
- 7 Additional functions
- 8 START-Button
- 9 Numerical display
- 10 Door Opener

## ADDITIONAL FUNCTIONS



### VARIO SPEED PLUS

With the "Save time" function, the runtime can be shortened by approx. 20% to 66% depending on the selected rinse program. Water and energy consumption increase with this setting.



## HYGIENE PLUS

With this function, the temperatures are increased and kept extra long in order to obtain a disinfection performance. Especially suitable for cleaning cutting boards and baby bottles.



## INTENSIVE ZONE

Perfect for mixed loading. You can rinse heavily soiled pots and pans in the lower basket along with normally soiled dishes in the upper basket. The spray pressure in the lower basket is increased, the rinsing temperature increased slightly.

## SWITCHING THE DISHWASHER ON

- 1 Open the door.
- 2 Switch the ON-/ OFF-Switch (1) on. The display of the program Eco 50 ° flashes. This program remains selected unless another program key (2) is pressed. The presumed program duration flashes in the numeric display (9).
- 3 Press the START-Button (8).
- 4 Close the door.  
The program starts.

### Note:

For environmental reasons, the Eco 50 ° program is preset every time the device is started.

## MATURITY DISPLAY

When the program is selected, the program runtime appears in the numeric display (9). Run time is determined during the program by the water temperature, the amount of dishes and the degree of soiling and may vary (depending on the program selected).

## PROGRAM END

The program end → I / 0:00 is shown in the display. In addition, the program end is acoustically indicated by a buzzer.

## SWITCHING THE DEVICE OFF

Short time after program end:

- 1 Open the door.
- 2 Switch the ON-/ OFF-Switch (1) off.
- 3 Remove dishes after cooling.

### Note:

After the end of the program, allow the device to cool a bit before opening it. This will prevent water vapor from escaping.

## INTERRUPT PROGRAM

- 1 Open the door.
- 2 Switch the ON-/ OFF-Switch (1) off. The lights go out. The program remains saved. If the appliance door has been opened with a hot water connection or a heated machine, first lean the door for a few minutes and then close it. Otherwise, by expansion (overpressure), the door can jump or leak water from the unit.
- 3 To resume the program, switch the ON-/ OFF-Switch (1) back on.
- 4 Close the door.

## CANCEL PROGRAM (RESET)

- 1 Open the door.
- 2 Push the START-Button (8) for 3 sec.  
The numeric display (9) shows 0:01.
- 3 Close the door.  
The program lasts about 1 min. The numeric display (9) shows 0:00.
- 4 Open the door.
- 5 Switch the ON-/ OFF-Switch (1) off.
- 6 Close the door.

## PROGRAM CHANGE

After pressing the START button (8) no program change is possible. A program change is only possible via program abort (reset).