

OPERATING INSTRUCTIONS DRYER

Put washed laundry in the dryer drum.

Close the dryer door.

Push the main button O to switch the dryer on.

Use **PROGRAM SELECTOR** to select the **desired program** - the knob can be turned in both directions.

Start the selected program with the **START** key on the right side of the control panel.

The status of the program is displayed on the display.

Bei **PROGRAMMENDE** erscheint im Anzeigefeld „**Fertig**“.

When the dryer is done the display shows "**Fertig**".

Take out your laundry and **leave the dryer door open**.

Push the main button O to switch the dryer off.

Please clean the LINT FILTER after every use

First remove all lint from the dryer door. Then remove both fluff filters and clean over the waste bin. To do this, fold each fluff filter apart, remove all fluff, close it again and replace the two fluff filters.

After each drying, please empty the CONDENSATE WATER TANK

Pull the condensate container out horizontally. Empty in the sink and push it back into the dryer until it clicks into place.