

OPERATING INSTRUCTIONS WASHING MACHINE

Open the **DOOR OF THE WASHING MACHINE** of the washing machine and **press the MAIN SWITCH O** to switch on the washing machine.

Use **PROGRAM SELECTOR** to **select the desired program** - the knob can be turned in both directions.

Put sorted laundry loosely in the laundry drum. **Pay attention to the maximum load**. When the filling window is open and the washing machine is switched on, a loading bar appears on the display. The loading bar flashes when the maximum load is exceeded.

To soften the water, add **1 scoop of softening powder directly to the laundry**. The powder is in the plastic box next to the washing machine.

Close the DOOR OF THE WASHING MACHINE.

The washing machine is equipped with an **intelligent dosing system = i-DOS** for liquid detergents. **You do not need to add detergent!**

BUTTON "i-DOS + water drops" on the control panel: container is filled with an aloe vera sensitive detergent, 20 - 60 °, for **colored laundry**.

TASTE „i-DOS + Wassertropfen und Blume“ auf dem Bedienfeld: Behälter ist befüllt mit Waschmittel von Frosch Citrus Vollwaschmittel, 20 – 95 °, **weiße Wäsche und Kochwäsche**.

"I-DOS + Drops of Water and Flower" BUTTON on the control panel: The container is filled with a full detergent, 20 - 95 °, white laundry and boiling wash.

Press the desired i-DOS button and **set the dosing level** for light, medium or heavily soiled laundry.

Start the selected program with the **START** button on the right side of the control panel.

When the **program is done** the display shows "**Fertig**". Open the **DOOR** of the washing machine and **leave it open**. Remove laundry.

Press the MAIN SWITCH O to switch off the washing machine.

CONTROL PANEL

On the right panel you can change the settings of the selected program and select additional program settings.

BUTTON „SPEED PERFECT“

Washing takes place in a shorter time with comparable washing effect but with higher energy consumption.

With this setting the maximum load is reduced by about half.

BUTTON „ECO PERFECT“

Energy-optimized washing process by reducing the temperature with a comparable washing effect.

BUTTON „TEMPERATUR“

Before and during the program, you can change the set temperature depending on the program progress.

The maximum temperature that can be set depends on the selected program.

BUTTON „SCHLEUDERN“

Before and during the program you can change the spin speed depending on the program progress. The maximum adjustable speed depends on the selected program and washing machine model

BUTTON „FERTIG IN“

With this setting, the start of the washing program can be specified.

We ask that you do not activate this setting in order not to block the washing machine for other guests.

BUTTON „START / PAUSE“

To start, pause or cancel a program.